



# TIRE-RITE



KEY	FUNCTION	DESCRIPTION
	ON/OFF	Long press to power on, short press to power off
	UNIT	Short press to change pressure units
	BACK-LIGHT	Short press, the back-light will light on for 20 seconds
	ZERO	Long press for 5 seconds to zero for elevation changes

SIGN	DESCRIPTION
kPa PSI Kg/cm <sup>2</sup> mBAR MPa	UNITS
	BATTERY LIFE
0%  100%	PRESSURE PROGRESS BAR

## How to operate the Pro Performance Air Gauge:

1. Attach Dream Auto air chuck by pushing it onto the valve stem. No need to hold a button to attach.
2. Press the On/Off button to power on the gauge.
3. Check to make sure the gauge reads 0.0. If not, simply press and hold the Zero button for 5 seconds.
4. To Inflate, depress the handle fully.
5. To Deflate, depress the handle halfway.
6. To disconnect the Dream Auto air chuck, depress the small button the side.